 
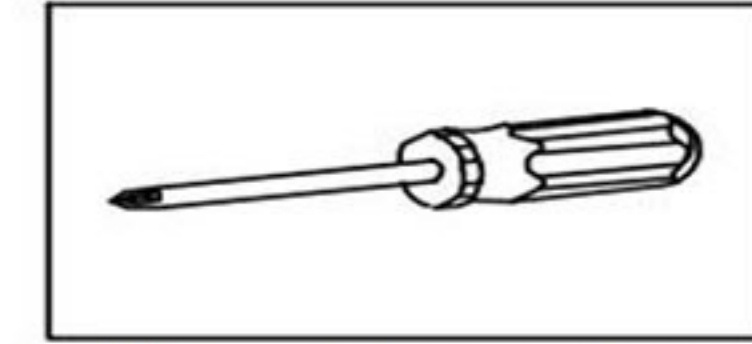 


Light Fixture Installation

Tools Required:

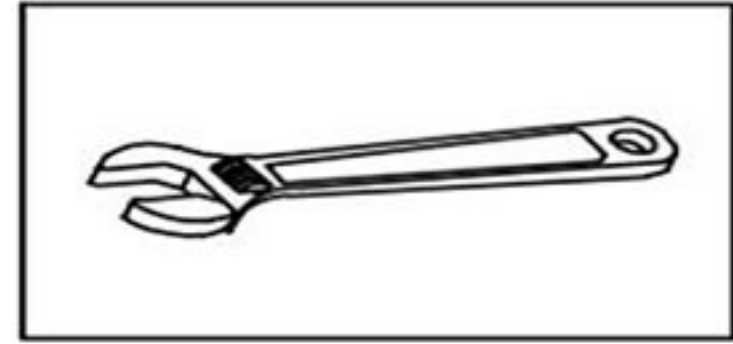

 
Adjustable Wrench

Philips Screwdriver

Before Installation


1. Please read these instructions before assembling or installing the product. **NOTE:** Installation by a licensed electrician is recommended.
2. Take out the fixture and the mounting package and make sure all parts are included. If any part is missing or damaged, please contact us.
3. All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken.
4. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
5. **IMPORTANT:** Turn off the main power at the circuit breaker and place the wall switch or pull chain in the "OFF" position.
6. Do not use bulbs with wattage greater than specified on this fixture.

Parts List

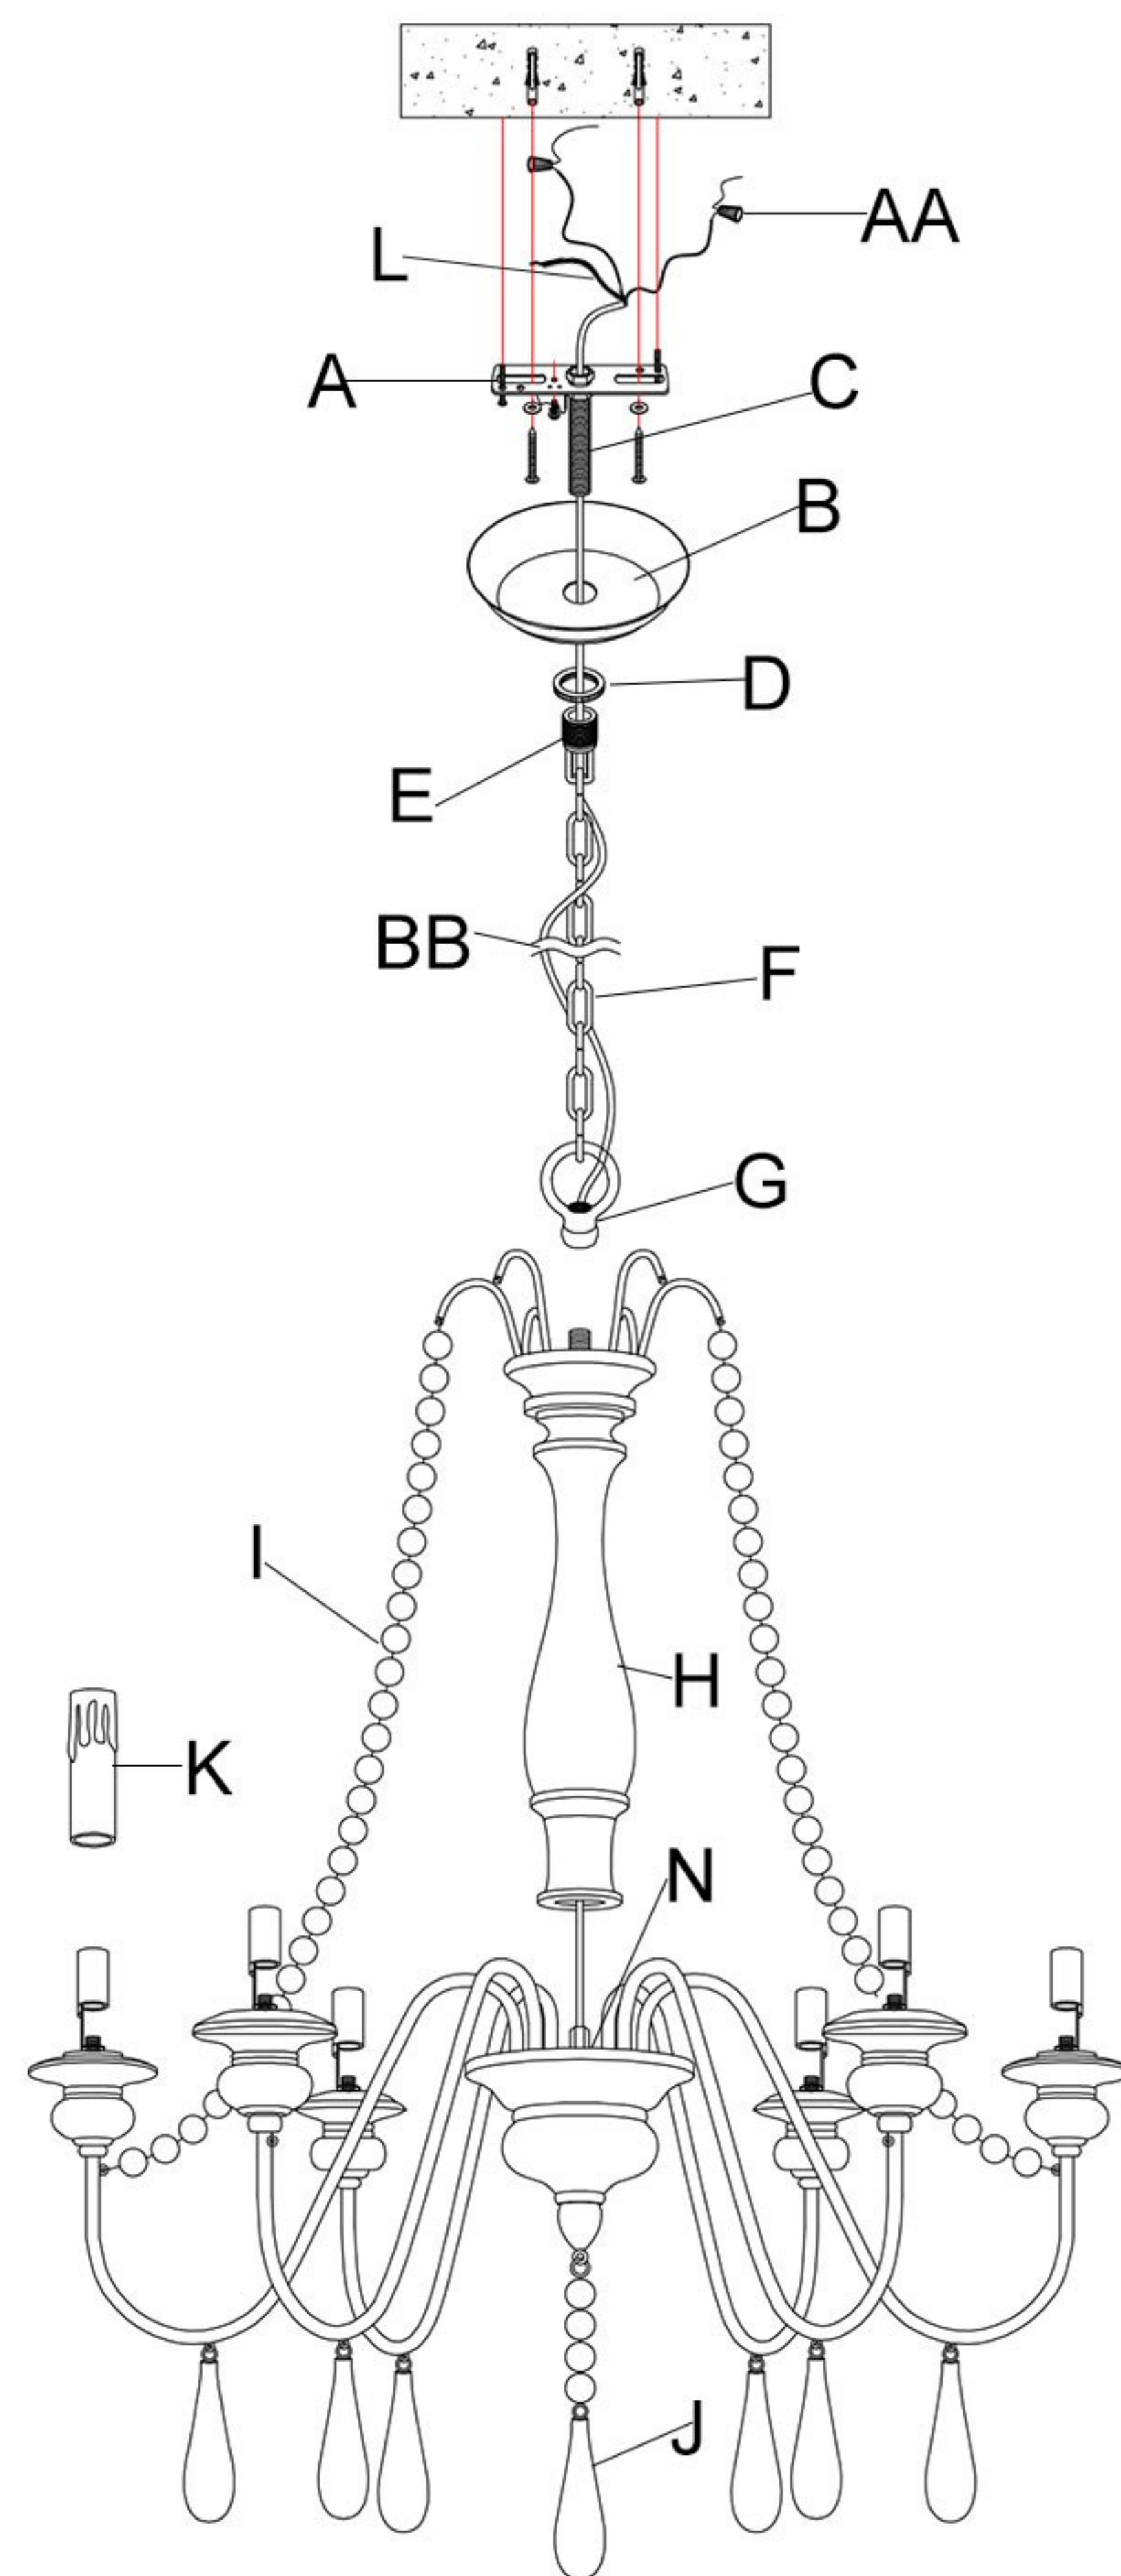

Part	Name	Quantity
A	mounting strap	1
B	canopy	1
C	mounting rod	1
D	lock nut	1
E	top chain connector	1
F	chain	1
G	bottom chain connector	1
H	centre column	1
I	wood bead strand	6
J	droplets	7
K	sleeves	6
L	ground wire	1
N	mounting plate	1
AA	wire connectors	2
BB	wire	1

 Installation Guide

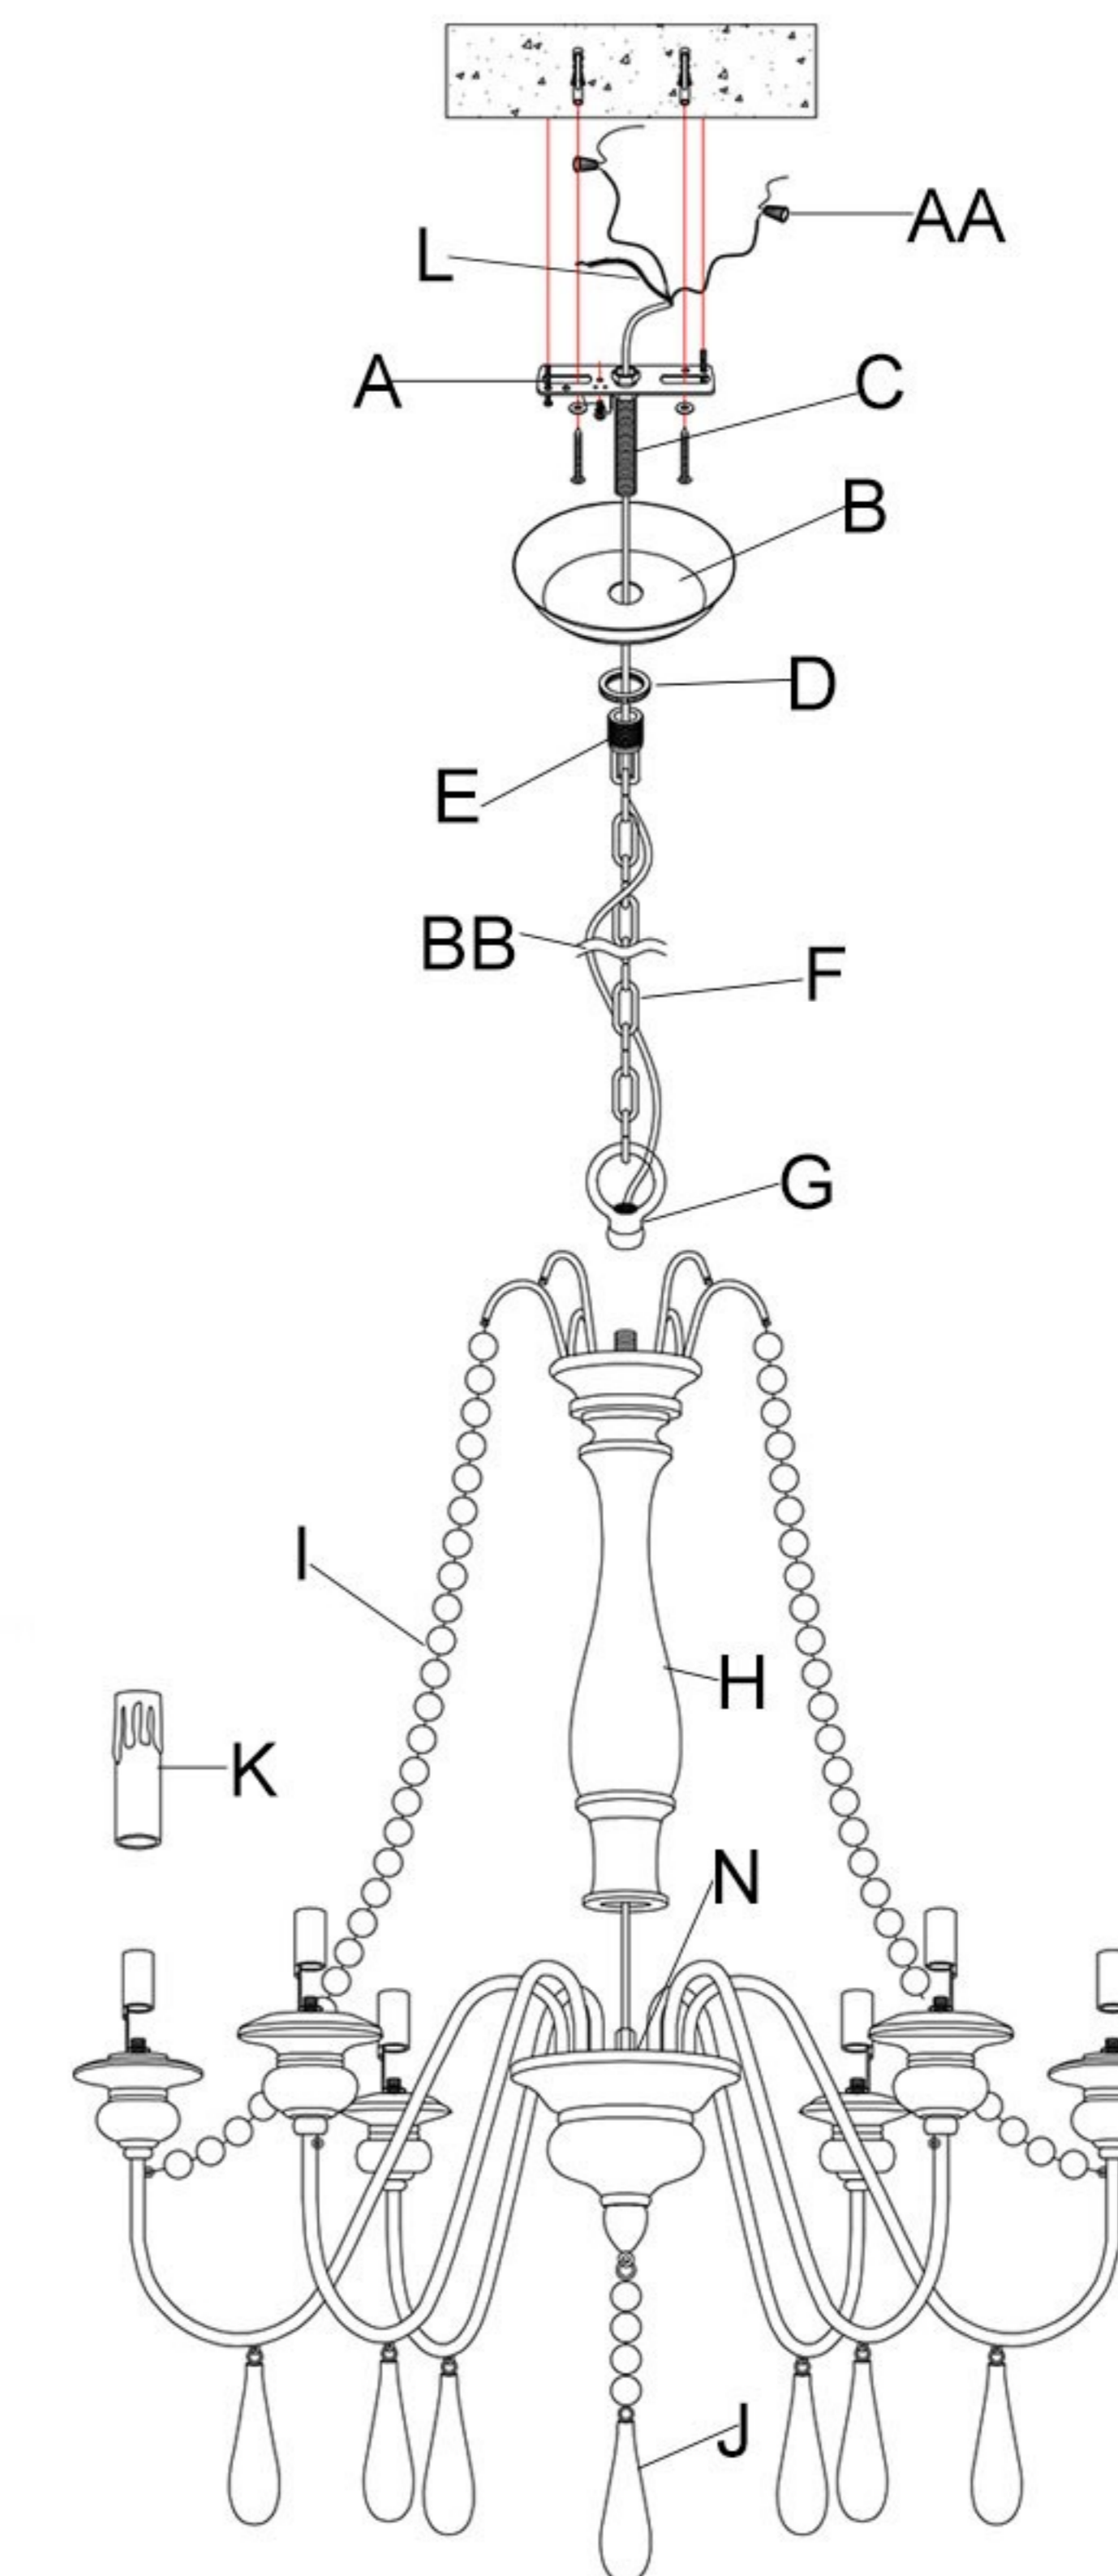

1. Shut off power before installation.
2. Fix the mounting strap (A) to the ceiling.
3. Hang the wood bead strings (I) and droplets (J) onto the light fixture according to the diagram.
4. Feed the main wire through centre column (H) and screw centre column (H) to the mounting plate (N).
5. Feed main wire (BB) through the chain connectors (E, G), chain (F), and canopy (B). Screw the bottom chain connector (G) onto the centre column (H).
6. Connect wires with wire connectors (AA) to the corresponding wires in the ceiling.
7. Attach canopy (B) to the mounting strap (A) and screw the top chain connector (E) onto the mounting rod (C), fixing the lock nut (D).
8. Install sleeves (K) and light bulbs (not included with the light fixture) and turn on the power.

Troubleshooting

Problem	Possible Cause	Corrective Action
Fixture does not light.	<ol style="list-style-type: none"> 1. Fixture may be wired incorrectly. 2. Worn or broken bulb. 3. Lamp socket or LED transformer (if applicable) may go bad. 	<ol style="list-style-type: none"> 1. Check wiring. 2. Replace bulb. 3. Replace lamp socket or LED transformer (if applicable).
Light bulb flickers.	<ol style="list-style-type: none"> 1. Switch Contacts are bad. 2. Wire connections are loose. 3. Light bulb socket may go bad. 	<ol style="list-style-type: none"> 1. Replace the switch. 2. Check wire connections. 3. Replace the socket.