

# Installation Instruction

## Before You Begin

1. Shut off the main water supply.
2. Do not disassemble the main body, as it has been installed & commissioned correctly & precisely before leaving the factory.
3. To avoid the faucet from jamming, DO flush the water pipe before installation.
4. After installation, make sure every joint is safely sealed (NO LEAKAGE).
5. Make sure to connect the hot/cold inlet pipe correctly, if standing in front, hot water pipe connecting to the left and cold water pipe connecting to the right.
6. It is recommended that installation of the product be done by a professional plumber.


## Cleaning & Maintenance

To keep product clean and shiny follow the instruction below.

1. Flush with clean water and dry with soft cloth only.
2. Do not use any detergent, polisher, sane-cloth, or a scraper.
3. Do not use acid detergent.

## Installation

- |                      |                   |                        |
|----------------------|-------------------|------------------------|
| 1. handle            | 7. mounting nut   | 13. threaded pipe      |
| 2. set screw         | 8. valve          | 14. waterlines         |
| 3. alley key         | 9. spout body     | 15. diverter valve     |
| 4. base plate        | 10. O-ring        | 16. rubber washer      |
| 5. indication button | 11. rubber washer | 17. shower hose        |
| 6. rubber washer     | 12. mounting nut  | 18. rubber washer      |
|                      |                   | 19. hand shower holder |

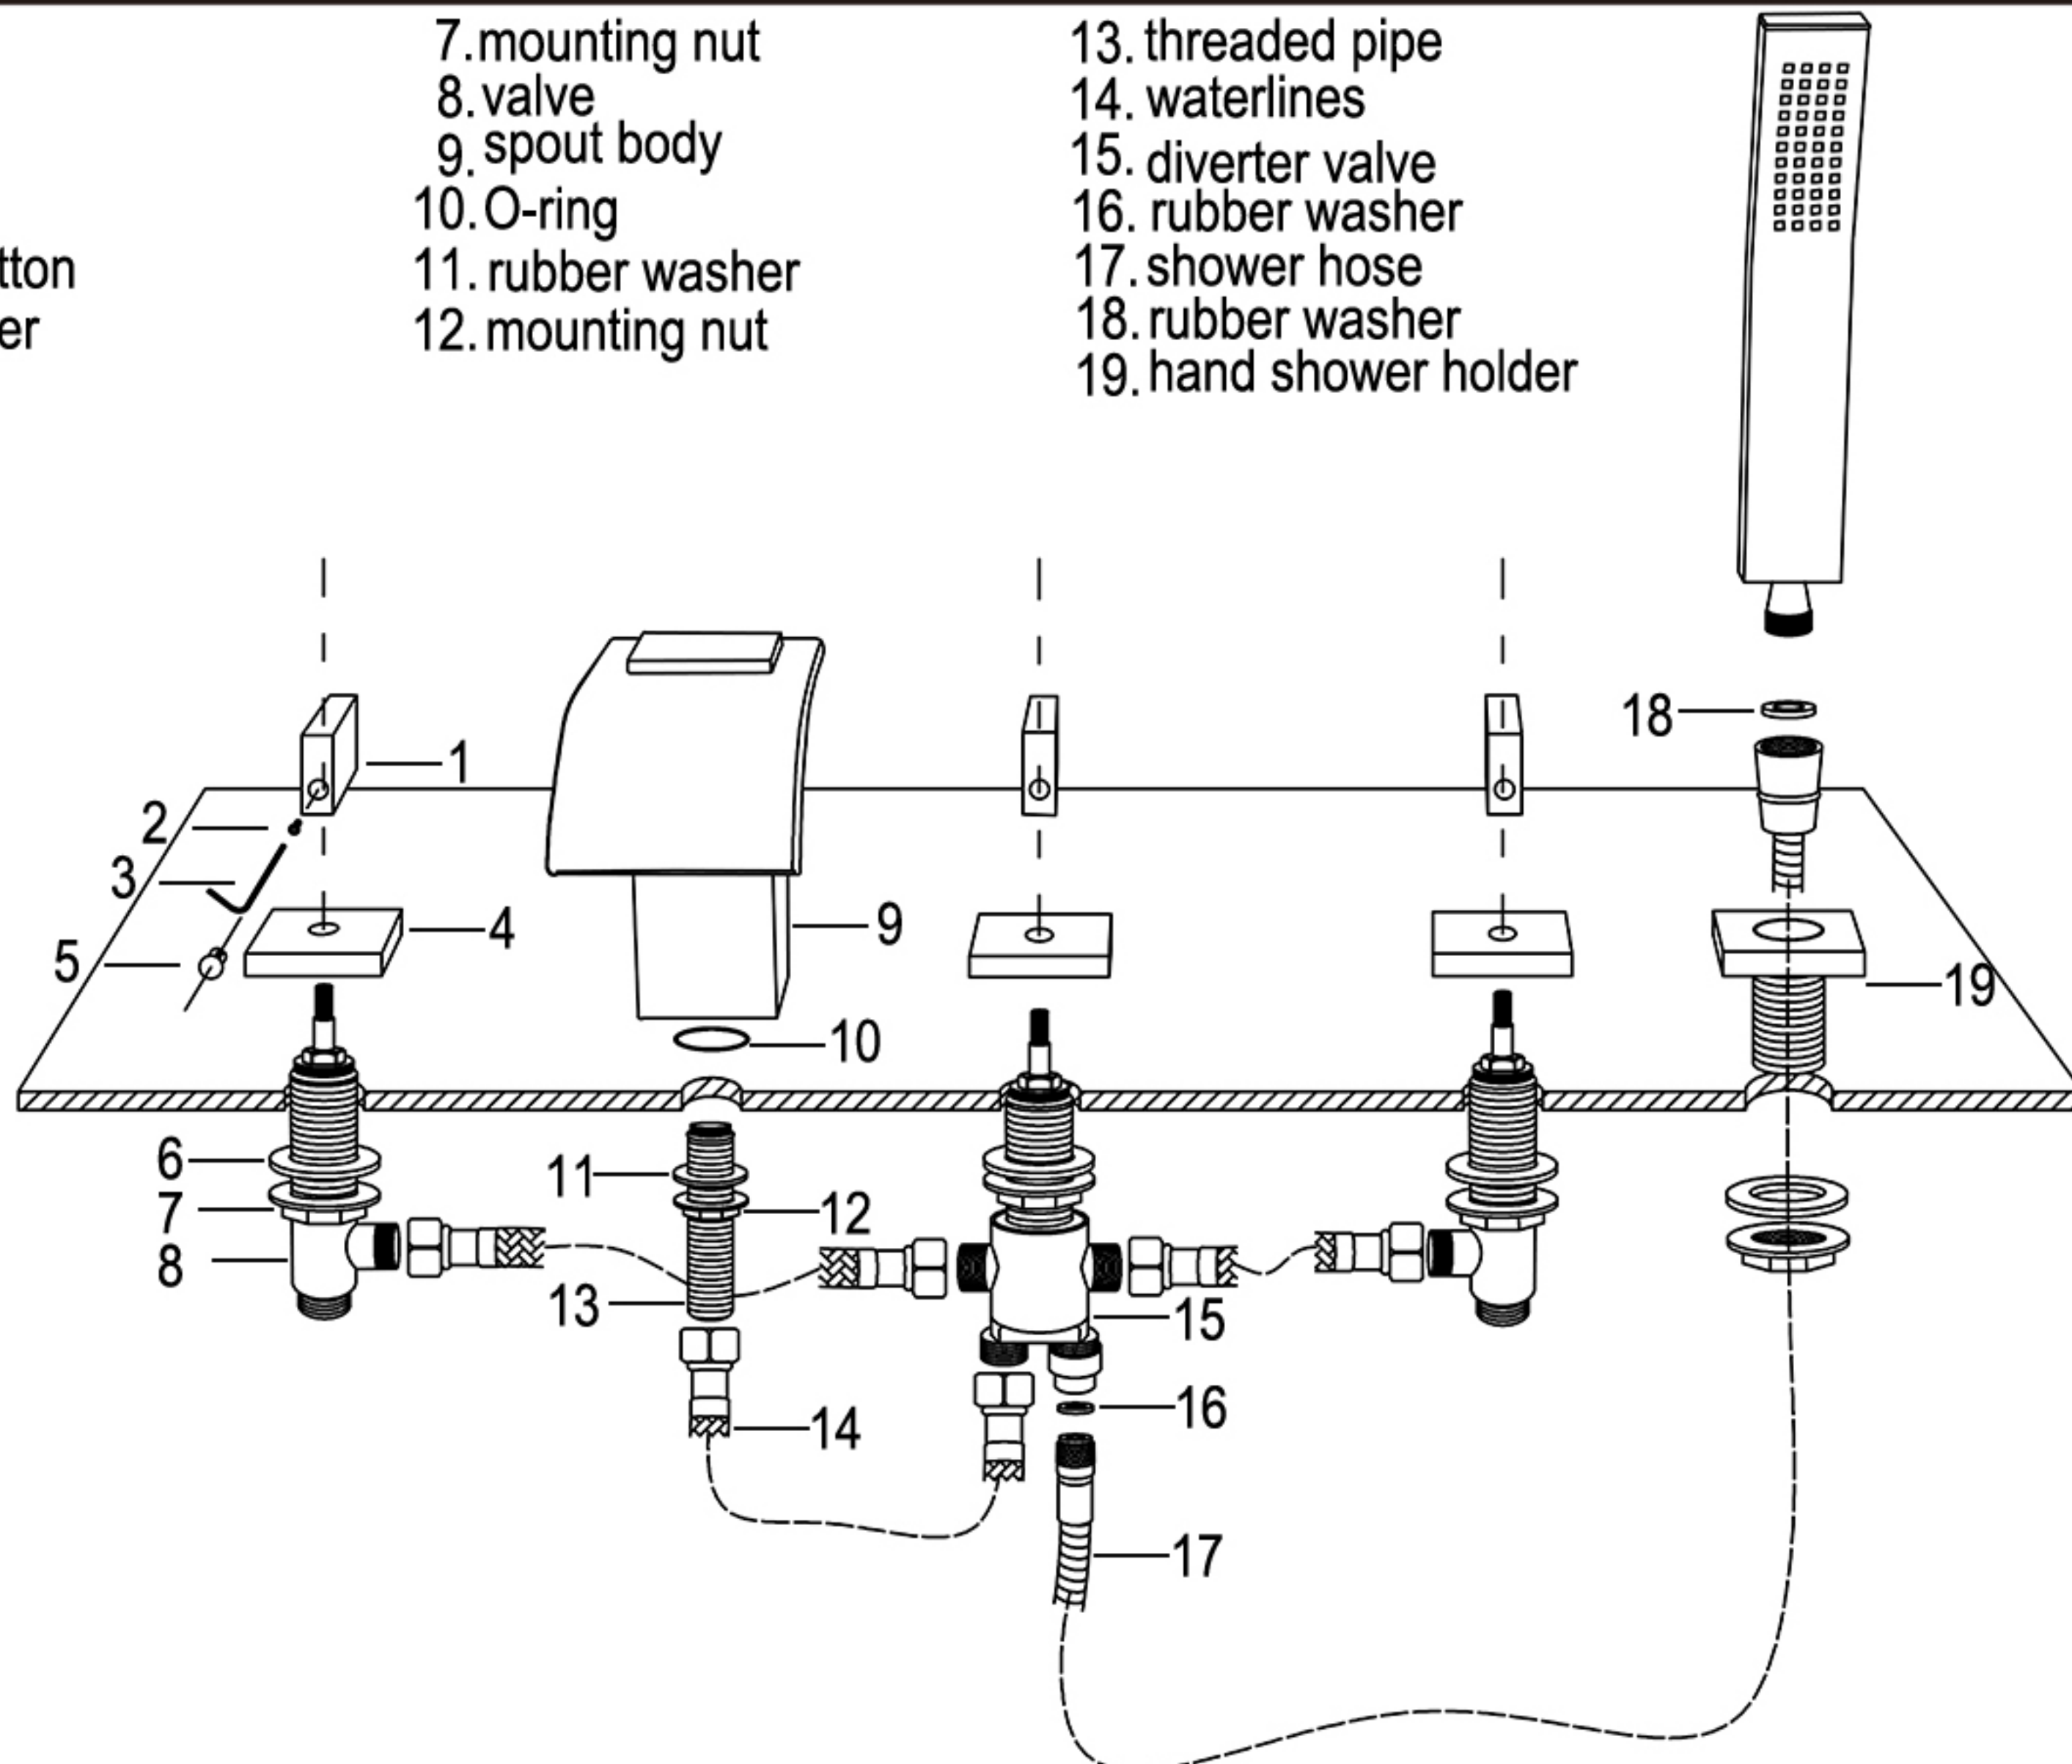

1. Fit O-ring into the bottom groove of spout body and insert spout body into specified drill hole on the counter top.
2. Install rubber washer to the threaded tail pipe of the spout body from underneath the counter top and then screw the mounting nut.
3. Install valve into specified drill hole underneath the counter top. Screw base plate into valve and fit the handle. Adjust the height and position of valve, then screw mounting nut to tighten valve underneath counter top securely.
4. Tighten set screw with alley key to fix the handle and then put the indication button on.
5. Install hand shower holder into specified drill hole. Put the rubber washer on and screw the mounting nut underneath the counter top.
6. Connect the shower hose to the hand shower and diverter valve. Make sure to add the rubber washer at both ends.
7. Connect the other waterlines according to the picture.
8. Connect waterlines (not included) onto the bottom of hot & cold valve and then to main water supply line.